

I Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence ➤ P. 26
- Check that there is petrol in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is ON
 - ▶ If the indicator light is ON, contact your dealer as soon as possible.

I Starter Motor Does Not Operate

Check the following items:

- Check for a blown fuse ➤ P. 91
- Check for a loose battery connection or battery terminal corrosion ➤ P. 42
- Check the condition of the battery ➤ P. 86

If the problem continues, have your motorcycle inspected by your dealer.