

## FRONT TOP COVER


The front top cover must be removed to remove the right leg shield and front handle cover.

### Removal:

- Remove the front top cover (1) by removing the screws A (2) and screws B (3).

### Installation:

- Installation can be done in the reverse order of removal.

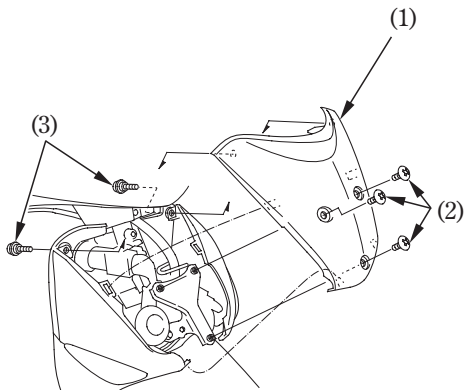

- (1) Front top cover
- (2) Screws A
- (3) Screws B