

| ITEMS | FREQUENCY | WHICHEVER COMES FIRST ↓ NOTE | → | | ODOMETER READING [NOTE (1)] | | | | | |
|-------|------------------------|--|-----------|-----------|-----------------------------|------------------------------|---|-----|----------------------|------------------|
| | | | ×1,000 km | ×1,000 mi | 1 | 4 | 8 | 12 | Refer to pages | |
| | | | MONTH | | 0.6 | 2.5 | 5 | 7.5 | | |
| | | | | | | | | | | |
| | DRIVE CHAIN | | | | | EVERY 1,000 km (600 mi) I, L | | | | 80 |
| | BRAKE FLUID | NOTE (4) | | | | I | I | I | | 21 |
| | BRAKE SHOES/PADS WEAR | | | | | I | I | I | | 94, 95 |
| | BRAKE SYSTEM | | | | I | I | I | I | | 21–23, 94, 95 |
| * | BRAKELIGHT SWITCH | | | | | I | I | I | | 101 |
| * | HEADLIGHT AIM | | | | | I | I | I | | 47 |
| | CLUTCH SYSTEM | | | | I | I | I | I | | 24 |
| | SIDE STAND | | | | | I | I | I | | 88 |
| * | SUSPENSION | | | | | I | I | I | | 87 |
| * | NUTS, BOLTS, FASTENERS | | | | I | | I | | | — |
| ** | WHEELS/TYRES | | | | I | I | I | I | | — |
| ** | STEERING HEAD BEARINGS | | | | I | | | I | | — |