


Headlight Bulb

1. Remove the front handle cover (page 46).
2. Remove the seat rubber (1).
3. Remove the headlight bulb (2) while pressing down on the pin (3).
4. Install a new bulb in the reverse order of removal.
 - Install the seat rubber with its “TOP” mark (4) facing up.

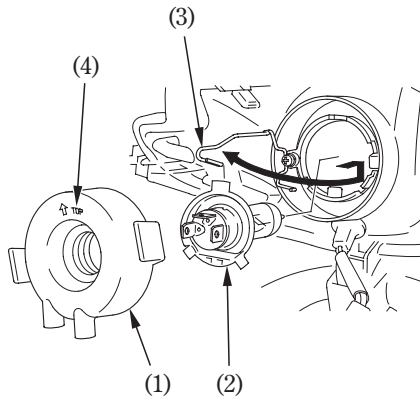

- (1) Seat rubber
- (2) Headlight bulb
- (3) Pin
- (4) “TOP” mark