

## CLUTCH

1. Make sure the ignition switch is "OFF."
2. Loosen the lock nut (2), and turn the clutch adjuster (1) counterclockwise until you feel resistance. Then turn 1/8–1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.
3. After adjustment, start the engine and test ride the ATC110 to be certain that the clutch is operating properly.



(1) Clutch adjuster

(2) Lock nut