


## Brake Lever/Parking Brake

The rear brake lever (1) and the brake pedal both operate the rear wheel brake. Either one can be used to stop the ATC. The front brake lever is at the right handlebar grip. The rear brake lever has the added feature of a lock (2) which allows the lever to be used as a parking brake.

Pull the brake lever back and lock it with the lock. Always apply the parking brake when parking on a hill or when leaving the engine running.

### NOTE:

- \* Use of the parking brake in freezing weather may cause the brake to freeze in the locked position.

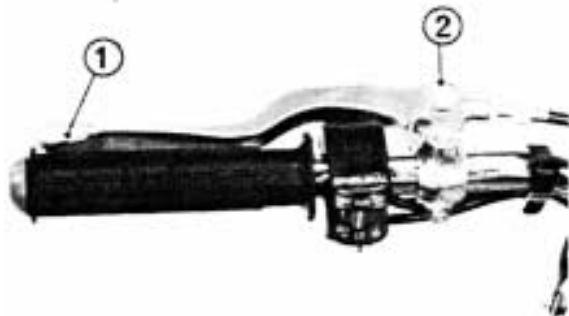

(1) Rear brake lever      (2) Parking brake lock