


### Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.

### Installation Note:

- Reinstall the rear wheels in the reverse order of disassembly.
- Tighten the wheel nuts in a cross-pattern to 20–25 N·m (2.0–2.5 kg·m, 14–18 ft·lb) torque.

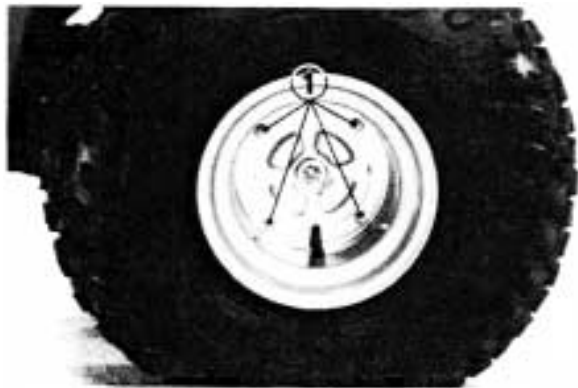

(1) Wheel nuts

