


## PARTS FUNCTION

### Engine Stop Switch

The three position engine stop switch (1) is under the headlight switch. When the switch is in the RUN position, the engine will operate. When the switch is in either OFF position, the engine will not operate.

This switch can be used as a safety or emergency switch.

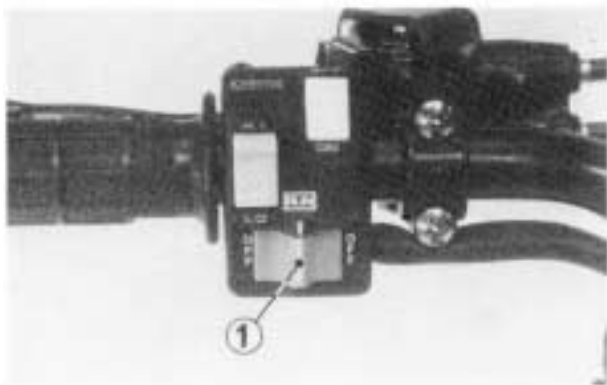


(1) Engine stop switch

### Headlight switch

The headlight switch (2) is above the engine stop switch and turns the headlight ON or OFF.

### Headlight dimmer switch

With the headlight switch (2) ON, use the dimmer switch (3) to select Hi for high beam or Lo for low beam.

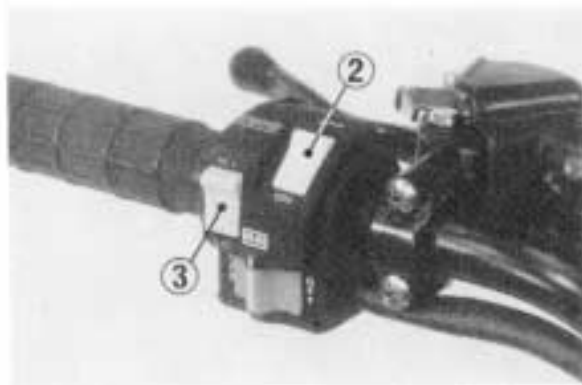

(2) Headlight switch (3) Headlight dimmer switch