

## Parking Brake


The clutch lever also functions as the parking brake lever.

To apply the parking brake, push down the parking brake arm pin (2), squeeze the clutch lever (1) and lock it with the lock (3). Always apply the parking brake when parking the ATC or starting the engine.

To release the parking brake, squeeze the clutch lever (1) so the lock (3) automatically retracts.

### NOTE:

- \* Use of the parking brake in freezing weather may cause the rear brake to freeze in the locked position.

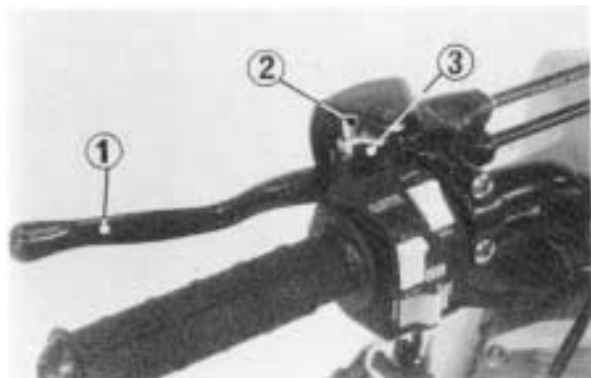


- (1) Clutch lever
- (2) Parking brake arm pin
- (3) Lock

## Front Brake

The front brake lever (1) is on the right handlebar. To stop the ATC, apply the front and rear brakes evenly, with the front wheel aimed straight ahead.

## Throttle Lever

The throttle lever (2) is next to the right handlebar grip and is operated by the rider's thumb. Pressing the lever forward opens the throttle. When the lever is released, spring tension closes the throttle automatically.

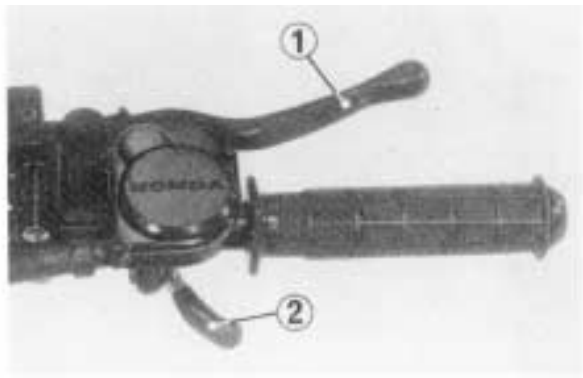

- (1) Front brake lever
- (2) Throttle lever