

Fuel Tank

Fuel tank capacity is 10.5 ℓ (2.78 US gal) including 1.5 ℓ (0.40 US gal) in the reserve supply. To open the fuel tank cap (1), pull out the breather tube (2) from the steering stem nut. Then turn the fuel tank cap counterclockwise.

Automotive gasoline with a pump octane number (R_2^M) of 86 or higher, or research octane number of 91 or higher may be used.

If knocking or pinging occurs try a different brand of gasoline or a higher octane grade.


CAUTION:

* *Should knocking or pinging persist while holding a steady speed on a level road, try changing brands of gasoline. If knocking or pinging still persists, consult your Honda dealer.*

After refueling, be sure to tighten the fuel tank cap firmly by turning clockwise until the arrow (3) on the cap faces forward. Insert the breather tube into the steering nut.

WARNING

- * *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the vehicle is refueled or where gasoline is stored.*
- * *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the tank cap is closed securely.*
- * *Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.*

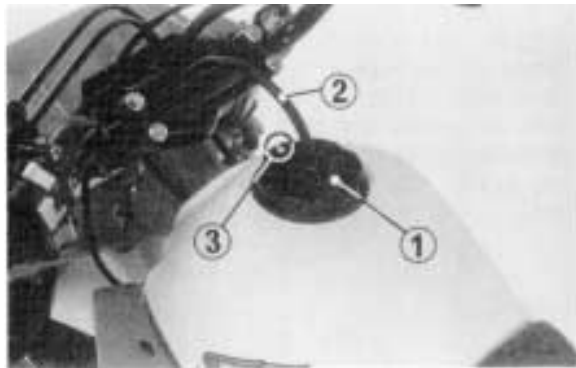

- (1) Fuel tank cap
(2) Breather tube

(3) Arrow