

MAINTENANCE

MAINTENANCE SCHEDULE

- The maintenance intervals shown in the following schedule are based upon average riding conditions. ATCs subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.
- Perform the Pre-ride Inspection (page 21) at each scheduled maintenance period.
- The U.S. Environmental Protection Agency requires manufacturers to certify that vehicles built after January 1, 1983 comply with applicable noise emission standards for one year or 3,000 km (1,865 miles) after the time of sale to the ultimate purchaser, when operated and maintained according to the instructions provided. Compliance with the terms of the Distributor's Warranty for the Honda Vehicle Noise Emission Control System is necessary in order to keep the noise emission control system in effect. (USA only)

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace L: Lubricate A: Adjust		EVERY	INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
*	FUEL LINE	YEAR: I			41
*	FUEL STRAINER SCREEN	YEAR: C			41
*	THROTTLE OPERATION		I	I	55
	AIR CLEANER	NOTE (1)		I	48
	AIR CLEANER CASE DRAIN TUBE	NOTE (2)		I	46
	SPARK PLUG			I	47
*	VALVE CLEARANCE		I	I	42

- * SHOULD BE SERVICED BY AN AUTHORIZED HONDA DEALER, UNLESS THE OWNER HAS PROPER TOOLS AND IS MECHANICALLY QUALIFIED.
- ** IN THE INTEREST OF SAFETY, WE RECOMMEND THESE ITEMS BE SERVICED ONLY BY AN AUTHORIZED HONDA DEALER.