


## OIL FILTER ROTOR


The oil filter rotor should be cleaned in accordance with the Maintenance Schedule on page 35.

1. Remove the right crankcase cover (page 39).
2. Remove the oil filter rotor cover (1) and clean the oil filter rotor (2).
3. Make sure the rotor cover gasket is in good condition and reinstall the oil filter rotor cover.

4. Install the other parts in the reverse order of removal.
5. Adjust the clutch's free play.
6. Fill the crankcase with the recommended oil and check for oil leaks.

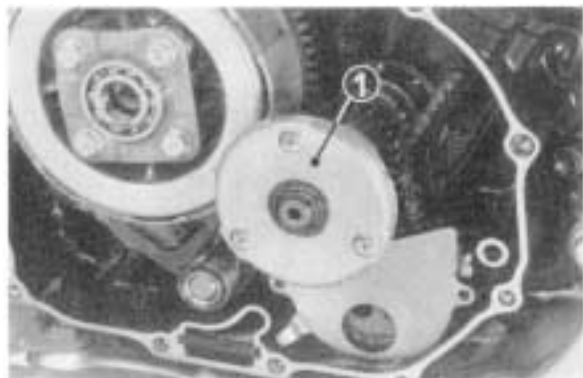

(1) Oil filter rotor cover

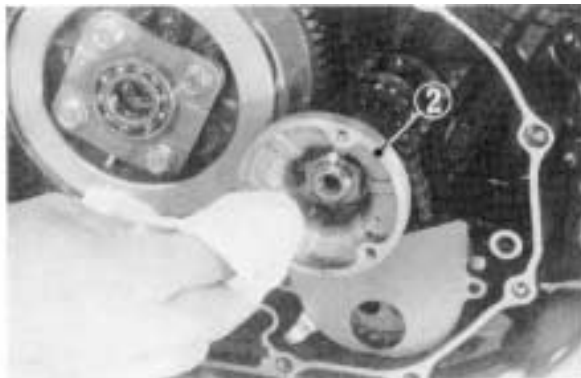

(2) Oil filter rotor