


## Parking brake

Parking brake adjustment may be required if the parking brake does not hold properly.


### Parking Brake Adjustment

1. Loosen the lock nut (1) on the rear caliper.
2. Screw the adjusting bolt (2) in until you feel resistance without applying the clutch/parking brake lever, and tighten the lock nut (1).
3. Measure the distance of the parking brake arm (3). The arm free play should be 3.5–4.5mm (0.14–0.18 in) at the tip of the parking brake arm.

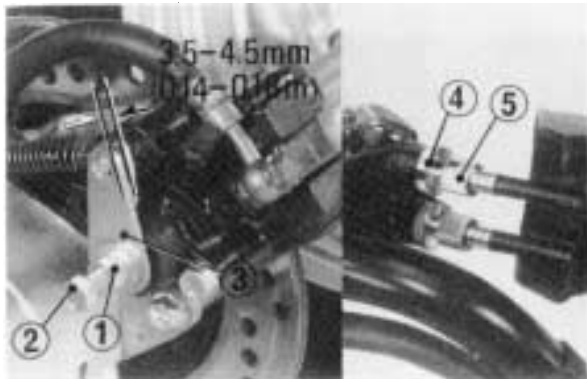

- (1) Lock nut  
(2) Adjusting bolt  
(3) Parking brake arm  
(4) Lock nut  
(5) Adjusting nut

4. Push down the parking brake pin (6) and squeeze the clutch lever until firm resistance is felt. Measure the distance the clutch lever has moved; the distance should be 31–39 mm (1.2–1.5 in).
5. To adjust the distance, loosen the lock nut (4) and turn the adjuster (5).
6. Recheck the distance of the parking brake arm (3) free play.

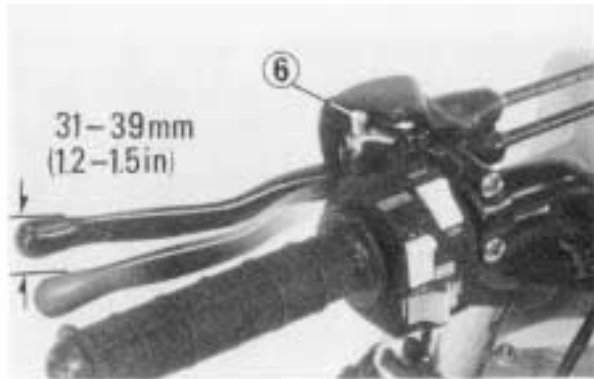

- (6) Parking brake pin