

STORAGE

To prepare the ATC for storage:

1. Completely clean all parts of the ATC. If the ATC has been exposed to sea air or salt water, wash it down with fresh water and wipe dry.
2. Drain the fuel tank and carburetors. Spray the inside of the tank with an aerosol rust-inhibiting oil. Reinstall the fuel cap on the tank.
Turn the fuel valve to RES and remove the carburetor drain screw; drain gasoline into an approved container. Reinstall the drain screw.

WARNING

- * *Gasoline is flammable and is explosive under certain conditions. Do not smoke or allow flames or sparks near the equipment while draining fuel.*
3. Inflate the tires to their normal pressure and place the ATC on blocks to raise the tires off the ground.
 4. Cover the ATC and store in a place which is free of humidity and dust.

Removal from Storage

1. Uncover and clean the ATC. Change the engine oil if more than 4 months have passed since the start of storage.
2. Drain any excess aerosol rust-inhibiting oil from the fuel tank. Fill the fuel tank with fresh gasoline.
3. Perform all Pre-ride Inspection checks (page 21). Test ride the ATC at low speeds in a safe riding area away from traffic.



(1) Carburetor drain bolt