

 **WARNING**

- \* *When the front axle is reinstalled, be careful that the grease seal is not cut or damaged.*
- \* *Be certain that the holding nuts and axle are tightened. If they are not, the wheel may come loose during operation.*
- \* *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*
- \* *Install the wheel nuts with their tapers on the inside as shown.*