


## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheels off the ground.
2. Loosen the wheel nuts (1) with a 17 mm socket wrench.
3. Remove the wheel.

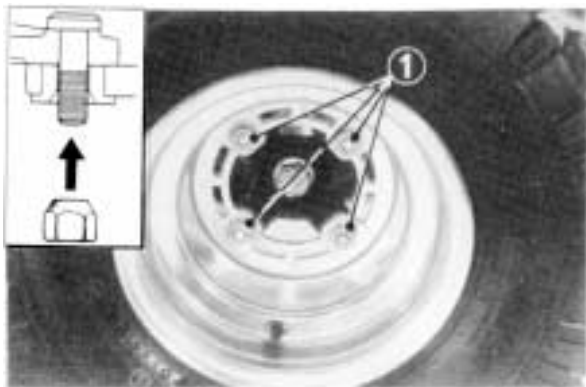

(1) Wheel nuts

## Installation:

Reinstall the rear wheels with valve stems to the outside and tighten the wheel nuts (1) in a crisscross, torquing them to 30–40 N·m (3.0–4.0 kg·m, 22–29 ft·lb).

## **WARNING**

- \* *If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*
- \* *Install the wheel nuts with their tapers on the inside as shown.*