


## Front Wheel Removal

1. Place a support block under the engine to raise the front wheel off the ground.
2. Remove the front brake adjusting nut (1) and disconnect the front brake cable.
3. Remove the cotter pin (2) securing front axle nut. Remove the axle nut (3).
4. Remove the axle (4), collar and the front wheel.

### NOTE:

- \* Cover the wheel hubs as soon as the axle has been removed to prevent the entry of dirt.

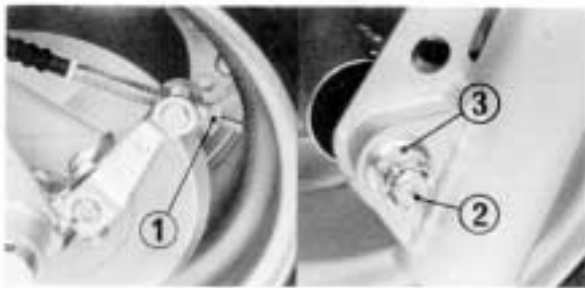

(1) Adjusting nut

(2) Cotter pin

(3) Axle nut

### Installation Note:

- Reinstall the front wheel by reversing the disassembly sequence, making sure to engage the brake panel pin (5) in the hole on the right fork leg.

Tighten the axle nut to 60–80 N·m (6.0–8.0 kg·m, 43–58 ft·lb) torque.

### WARNING

- \* *If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly.*



(4) Axle

(5) Brake panel pin