


3. Remove air filter element tube ⑤ and support ④ from filter element ③.
4. Wash the filter element in clean stoddard solvent and allow to dry thoroughly.
5. Soak the filter element in clean gear oil (No. 80~No. 90) until saturated, then squeeze out excess oil.
6. Reassemble filter by reversing the disassembly sequence procedures.

WARNING:

Gasoline or low flash point solvents are highly flammable and must not be used to clean air filter elements.

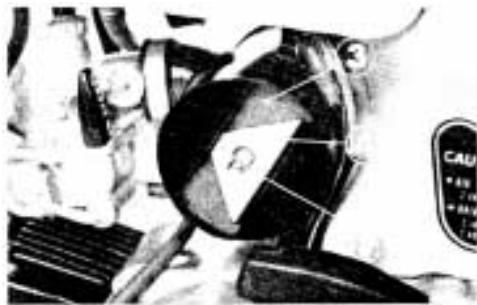

- ③ Filter element ④ Filter element support ⑤ Filter element tube