


REMOVING THE FRONT WHEEL

If limited carrying space requires removal of the front wheel, use the following procedure:

1. Remove the cotter pin ① securing the front axle nut.

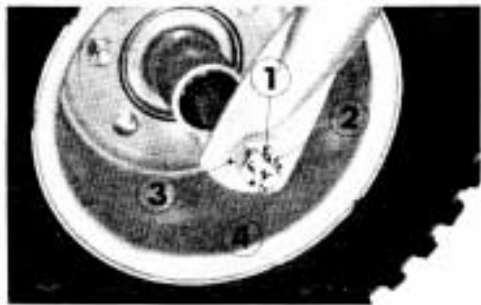

- ① Cotter pin ② Axle nut
③ Washer ④ Front axle

2. Remove the axle nut ② and washer ③.
3. Pull out the axle ④ and then remove the front wheel.

INSTALLING THE FRONT WHEEL

Reinstall the front wheel by reversing the removal procedures.

NOTE:

Install the wheel so the tire valve is on the left side. (As viewed by the rider.) Replace the cotter pin, if damaged. To reduce the hazard of snagging the ends of the cotter pins, while the ATC is operated, we recommend that the projecting ends of the front axle cotter pins be cut close to the axle nuts.

WARNING: Be sure that the axle nuts are properly secured by cotter pins; otherwise, the wheels may loosen while the ATC is being operated.