


THROTTLE CABLE INSPECTION AND ADJUSTMENT

Inspect the condition and operation of the throttle cable. The throttle cable must not bind or impair smooth operation of the throttle lever in any steering position. Reroute the cable if it is improperly installed. Replace the cable if it has become worn or kinked.

Free play, measured at the tip of the throttle lever, should be maintained at 5 ~ 10 mm (3/16 ~ 3/8 inch).

The adjusting nut is located at the top of the carburetor, against the end of the throttle cable housing. Slide the rubber sleeve ① back to expose the throttle cable adjuster ②. Reinstall the sleeve after adjustment.

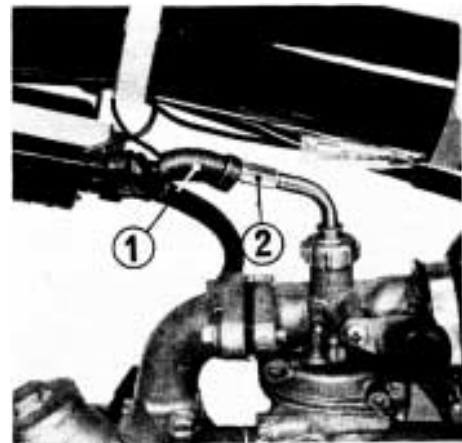

① Rubber sleeve ② Throttle cable adjuster