
MAINTENANCE OPERATIONS	37
Engine Oil Level	37
Engine Oil Change	37
Brake Adjustment	39
Drive Chain Adjustment	40
Drive Chain Lubrication	41
Valve Clearance Adjustment	42
Contact Breaker Point Gap and Ignition Timing Adjustment	44
Spark Plug Replacement and Adjustment	45
Air Cleaner Maintenance	46
Throttle Cable Inspection and Adjustment	47
Carburetor Adjustment	48
Fuel Strainer Maintenance	49
Cam Chain Adjustment	50

Clutch Adjustment	51
Spark Arrester Maintenance	52
TRANSPORTATION THE ATC	53
Fuel	53
<i>Removing and Installing the Rear Wheels</i>	54
Removing the Front Wheel	55
Installing the Front Wheel	56
STORAGE	57
OPTIONAL PARTS	58
SPECIFICATIONS	59
WIRING DIAGRAM	60