

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust		INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	SPARK PLUG		I	45
*	VALVE CLEARANCE (COLD ENGINE)	I	I	42
*	CAM CHAIN TENSIONER	A	A	50
*	CARBURETOR (HOT ENGINE)	I	I	48
	FUEL LINE	I: (EVERY YEAR)		13
*	FUEL STRAINER SCREEN	C: (EVERY YEAR)		49
	THROTTLE OPERATION	I	I	47
	DRIVE CHAIN	NOTE(2)	I	40-41
*	BRAKE SHOES	I: (EVERY YEAR)		39
	BRAKE SYSTEM	I	I	39
*	CLUTCH	A	A	51
*	SPARK ARRESTER		C	52
	ALL NUTS, BOLTS, FASTENERS	I	I	-
	TIRES	I	I	33
*	STEERING HEAD BEARING	A: (EVERY YEAR)		-