


MAINTENANCE OPERATIONS

ENGINE OIL LEVEL

Check engine oil level at the start of each day the **ATC 70** is to be ridden. The oil filler cap contains a dipstick ① for measuring oil level.

Oil level should be checked with the **ATC 70** on level ground. Remove the oil filler cap/dipstick, wipe it clean and reinsert the dipstick without screwing it in. Remove the oil filler cap/dipstick again and check the oil level.

Oil level should be maintained between the upper ② and lower ③ oil level marks on the dipstick.

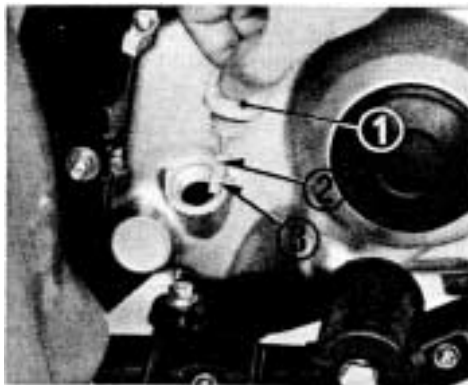

- ① Dipstick
- ② Upper level mark
- ③ Lower level mark

ENGINE OIL CHANGE

Engine oil should be changed in accordance with the maintenance schedule on page 35. Use motor oils of the grade and viscosity recommended on page 15.

When changing oil, drain the used oil from the crankcase while the engine is still warm. This will ensure complete and rapid draining.

1. Remove the oil filler cap/dipstick from the right crankcase cover.