



VALVE TAPPET ADJUSTMENT

Valve tappet clearance should be maintained at 0.002 in. (0.05mm). Excessive clearance will cause tappet noise. Insufficient clearance will cause loss of power and valve damage.

Valve tappet clearance must be checked with the engine cold.

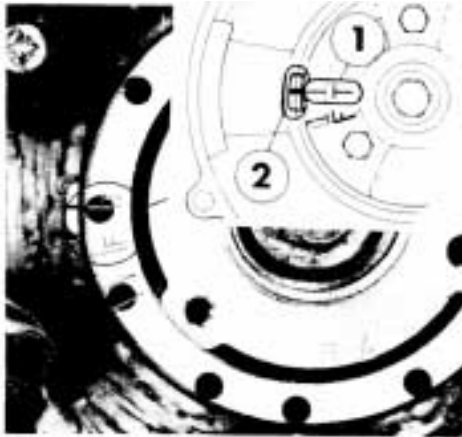

- ① "T" mark
- ② Index mark

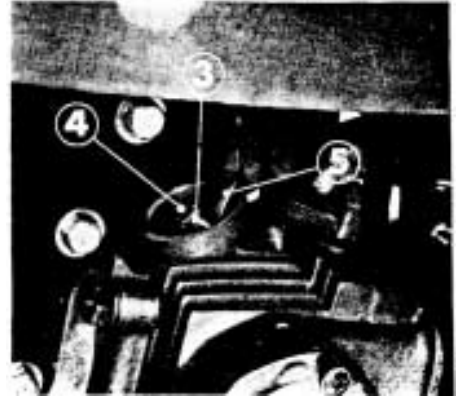

- ③ Adjusting screw lock nut
- ④ Adjusting screw
- ⑤ Tappet gauge