


FUEL STRAINER MAINTENANCE

The fuel strainer is located on the right side of the carburetor body. The fine mesh screen of the strainer prevents dirt from entering the carburetor passages. Dirt which accumulates at the filter must be removed periodically, or the flow of fuel will eventually be restricted.

1. Turn the carburetor fuel valve to the "S" position.
2. Remove the two screws which retain the fuel strainer cover, and remove the cover.
3. Remove the neoprene "O" ring ② and the filter screen ①.
4. Wash the filter screen in solvent.
5. Reassemble by reversing the disassembly sequence.
6. Turn the carburetor fuel valve to the "ON" position, and check for leaks at the fuel strainer cover.

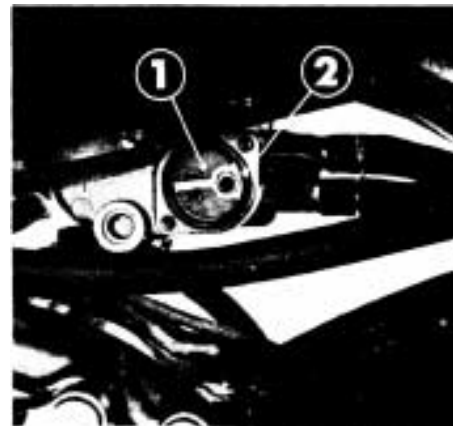

① Filter screen ② "O" ring seal