


CLUTCH ADJUSTMENT

The automatic clutch must be adjusted while the engine is not running.

Loosen the lock nut ②, and turn the clutch adjuster ① counterclockwise until you feel resistance. Then turn the clutch adjuster 1/8 to 1/4 turn clockwise, and tighten the lock nut to hold the adjuster in this position.

After adjustment, start the engine and test ride the **ATC 90** to be certain that the clutch is operating properly.

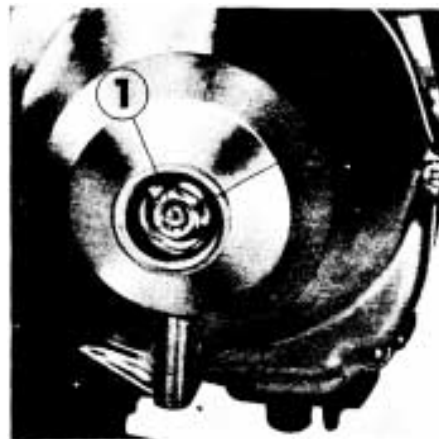

① Clutch adjuster ② Lock nut