

Fuel

Fuel Cock

The three way fuel cock (1) is on the left side near the carburetor.

OFF


With the fuel cock in the OFF position, fuel cannot flow from the tank to the carburetor. Turn the cock OFF whenever the motorcycle is not in use.

ON

With the fuel cock in the ON position, fuel will flow from the main fuel supply to the carburetor.



- **To avoid running out of fuel that may result in a sudden stop, learn how to operate the fuel cock when riding the motorcycle.**
- **Be careful not to touch any hot engine parts while operating the fuel cock.**

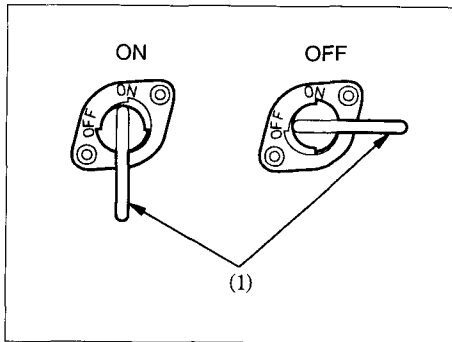

(1) Fuel cock