

Seat Lock


The seat lock (1), is on the left side below the seat.

To lift the seat, insert the ignition key (2) and turn it clockwise to unlock.

To lock the seat, lower and push down on it until it locks.

ATTENTION

Make sure the seat is secure before riding.

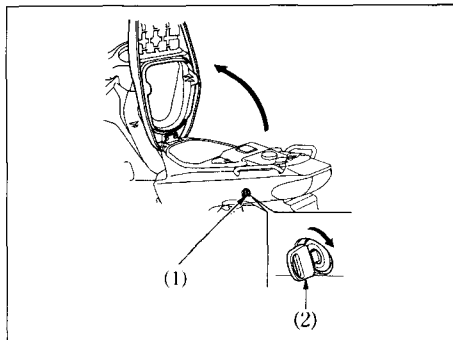

- (1) Seat lock
- (2) Ignition key