

## Headlight Aim Vertical


### Adjustment

Vertical adjustment can be made by moving the headlight assembly (1) as necessary.

To move the headlight assembly (1), loosen the bolt (2).

Tighten the bolt (2) after adjustment.

Obey local laws and regulations.

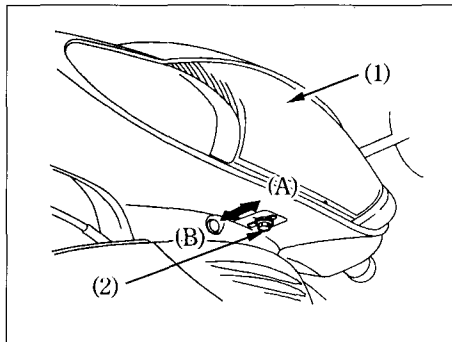

(1) Headlight assembly

(A) Up

(2) Bolt

(B) Down