

Battery

(Refer to the maintenance precautions on page 48).



If the motorcycle is operated with insufficient battery electrolyte, sulfation and battery plate damage will occur.

If rapid loss of electrolyte is experienced, or if your battery seems to be weak, causing electrical problems, see your Honda dealer.

Battery electrolyte:

The battery (1) is behind the front cover.

1. Remove the front cover (2) by removing six screws (3).
2. Remove the bolt (4).
3. Remove the battery holder (5).

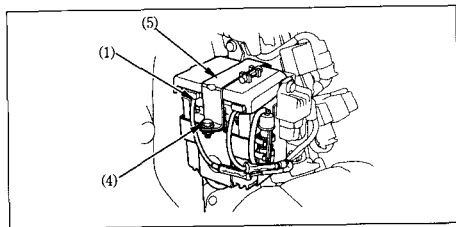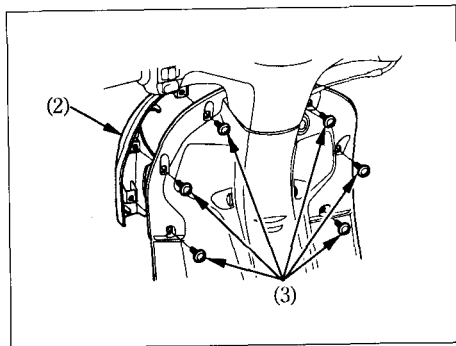

- | | |
|-----------------|--------------------|
| (1) Battery | (4) Bolt |
| (2) Front cover | (5) Battery holder |
| (3) Screws | |