


Front/Rear Turn Signal Bulb

Front turn signal bulb:

1. Remove the turn signal lens (1) by removing the screw (2).
2. Slightly press the bulb (3) and turn it counterclockwise.
3. Install a new bulb in the reverse order of removal.

Rear turn signal bulb:

1. Remove the taillight lens (page 82).
2. Remove the turn signal lens (1).
3. Slightly press the bulb (3) and turn it counterclockwise.
4. Install a new bulb in the reverse order of removal.

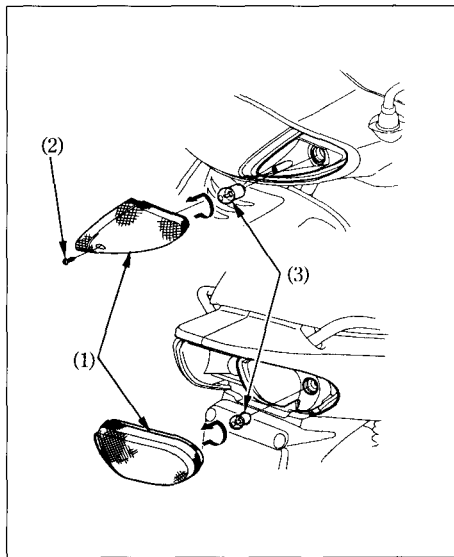

- (1) Turn signal lens
- (2) Screw
- (3) Bulb