


### Fuse box:

The fuse box is located behind the right side cover. The specified fuse are:

10A

1. Remove the right side cover (page 31).
2. Open the fuse box cover (1).
3. Pull the old fuse out of the clips; or slide it lengthwise until one end comes out, then lift it out with your fingers.  
Push a new fuse into the clips.  
The spare fuse (2) is located in the fuse box.
4. Close the fuse box cover and install the right side cover.

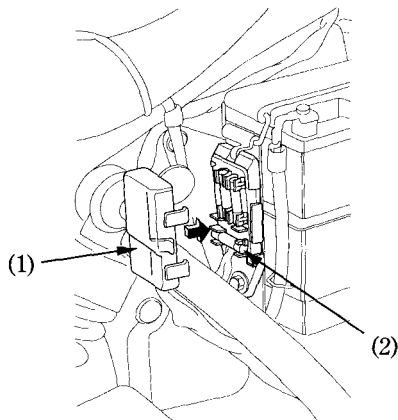

(1) Fuse box cover

(2) Spare fuse