

SEAT


Front seat

To remove the seat (1), insert the ignition key into the seat lock (2) and turn it clockwise. Pull the seat lock lever (3) downward to unlock the seat. Pull the seat back and up.

To install the seat, insert the front prongs (4) into the front stay (5) and the rear prongs (6) into the rear stays (7) on the frame.

Push forward and then down on the rear of the seat.

Be sure the seat is locked securely in position after installation.

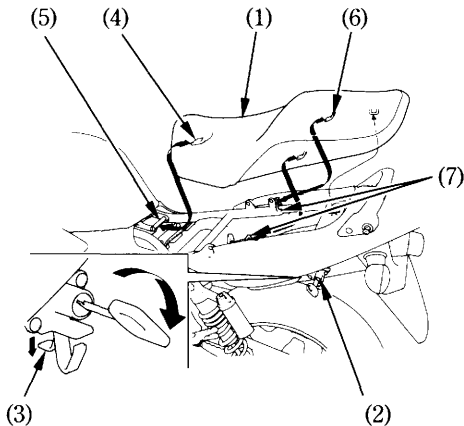

- | | |
|-----------------|-----------------|
| (1) Seat | (5) Front stay |
| (2) Seat lock | (6) Rear prongs |
| (3) Lock lever | (7) Rear stays |
| (4) Front prong | |