


Odometer/Tripmeter/Air Temperature Meter/Coolant temperature meter (display mode 1)

The Display mode 1 has four functions: odometer, tripmeter, Air temperature meter and coolant temperature.

Press the left control button (1) to select "ODO" (Odometer), "TRIP 1" (Tripmeter 1), "TRIP 2" (Tripmeter 2), "Air temperature meter" and "TEMP" (Coolant temperature) mode.

ED/F/U/BR/SI types: Odometer and tripmeter read in kilometers.
E type: Odometer and tripmeter read in miles.

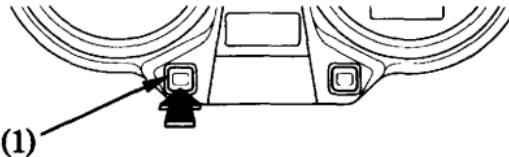

(1) Left control button

