


Overheating Message

When the coolant temperature reaches 122°C, the temperature begins to flash and high coolant temperature indicator (2) flashes.

If this occurs, stop the engine and check the reserve tank coolant level. Read pages 57 – 58 and do not ride the motorcycle until the problem has been corrected.

NOTICE

Exceeding maximum running temperature may cause serious engine damage.

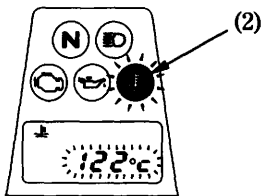

(2) High coolant temperature indicator