


Display Check

When the ignition switch is turned on, all the mode and digital segments will show, and the tachometer segment progress to maximum scale and then disappear. If any part of these displays does not come on when it should, have your dealer check for problems.

Speedometer

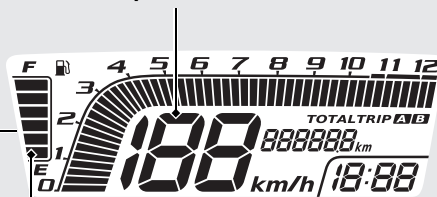

Fuel gauge

Remaining fuel when only 1st (E) segment starts flashing:
approximately 2.3 litres (0.61 US gal, 0.51 Imp gal)

If the fuel gauge indicators repeat flashing or turned off: → P.78



continued 21