

Other Adjustments ► Adjusting the Headlight Aim

Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion using a Phillips screwdriver provided in the tool kit (P. 48) in or out as necessary. Obey local laws and regulations.

Maintenance

