

Electrical Trouble ► Blown Fuse

## Blown Fuse

Before handling fuses, see "Inspecting and Replacing Fuses." ▣ P. 40

### I Fuse Box Fuses

1. Remove the front seat. ▣ P. 50
2. Open the fuse box cover.
3. Pull the fuses out one by one check for a blown fuse. Always replace a blown fuse with a spare of the same rating.
4. Close the fuse box cover.
5. Reinstall parts in the reverse order of removal.

Troubleshooting

