


## CHOKE LEVER

The choke lever ① is located at the left side of the engine near the left cylinder carburetor. When the choke lever is moved to ② (normal driving position) the chokes are fully open. When the choke lever is moved to ③, the chokes are fully closed (cold engine starting position).

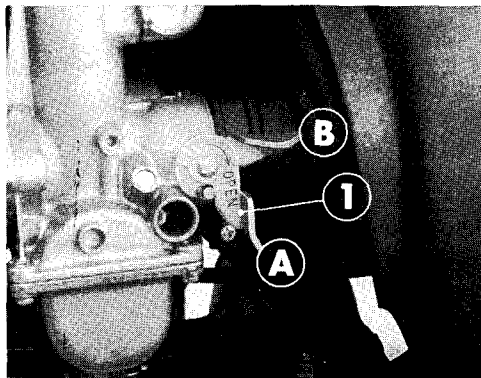

① Choke lever