

| (Ref.No.) Description | Function |
|--------------------------------------|--|
| (7) Right turn signal indicator | Flashes when the right turn signal operates. |
| (8) Neutral indicator (green) | Lights when the transmission is in neutral. |
| (9) Low oil pressure indicator (red) | <p>Lights when the engine oil pressure is below the normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p> |
| (10) Left turn signal indicator | Flashes when the left turn signal is operates. |
| (11) High beam indicator (blue) | Lights when the headlight is on high beam. |
| (12) Tripmeter reset knob | Resets tripmeter to zero (0). Turn knob in direction shown. |