

(Ref.No.) Description	Function
(7) Low oil pressure indicator (red)	<p>Lights when the engine oil pressure is below the normal operating range. Should light when ignition switch is ON and engine is not running. Should go out when the engine starts, except for occasional flickering at or near idling speed when engine is warm.</p> <p>CAUTION: * Running the engine with insufficient oil pressure may cause serious engine damage.</p>
(8) Left turn signal indicator	Flashes when the left turn signal is operates.
(9) High beam indicator (blue)	Lights when the headlight is on high beam.