

## Adjusting the Headlight Aim

You can adjust vertical aim of the headlight for proper alignment. Turn the pinion using a Phillips screwdriver provided in the tool kit (► P. 57) in or out as necessary. Obey local laws and regulations.

