

Ref. No.	Description	Function
4	Tachometer	Indicates engine rpm.
5	Tachometer red zone	During acceleration, engine RPM indicator needle may be allowed to briefly enter the red zone. However, the motorcycle must not be operated in the red zone for any length of time and must NEVER be operated beyond it.
6	Tripmeter	Indicates distance traveled per trip. (meter can be reset for each trip)
7	High beam indicator light (blue)	Light will be on when headlight is on high beam.
8	Left turn signal indicator light (amber)	Left light will flash when left turn signal light is operating.
9	Right turn signal indicator light (amber)	Right light will flash when right turn signal light is operating.
10	Neutral indicator light (green)	Light will be on when the transmission is in neutral.
11	Tripmeter reset knob	Reset the tripmeter to zero (0) by turning the tripmeter reset knob in the direction of the arrow.