


Headlight Dimmer Switch

The headlight, taillight, two running lights (combining the front turn signal lights) and instrument lights will be on when the ignition switch is turned to the "ON" position.

The headlight dimmer switch (1) is located on the left handlebar grip switch housing.

When the headlight dimmer switch is moved to the "Hi" position, the high beam is on. When the headlight dimmer switch is moved to the "Lo" position, the low beam will be illuminated.

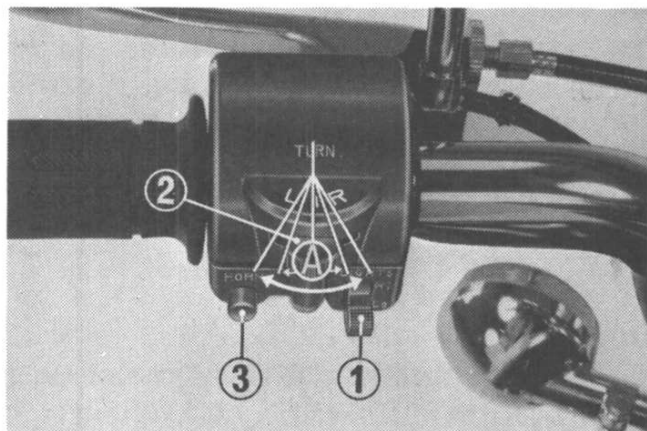

- (1) Headlight dimmer switch
- (2) Turn signal switch
- (3) Horn button