


## Fuel Tank

Fuel tank capacity is 18.0ℓ (4.8 U.S. gal.) including 4.5ℓ (1.2 U.S. gal.) in the reserve supply. Open the fuel filler door (1) with the ignition switch key and then turn the cap (2) counterclockwise to remove.

After refueling replace the filler cap securely otherwise fuel will spill from the tank. The fuel filler door locks automatically when closed. The fuel tank filler cap

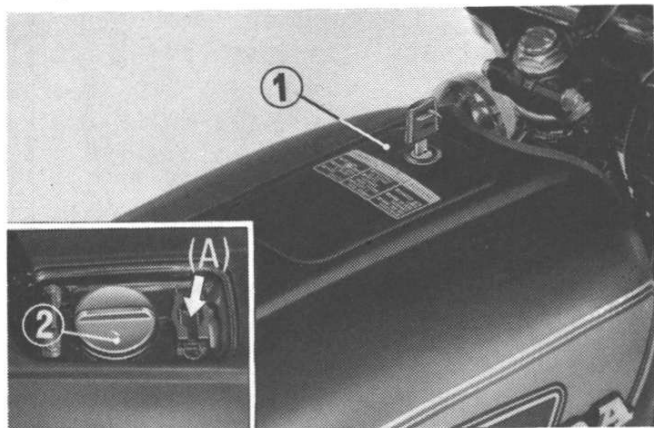

(1) Fuel filler door      (2) Fuel filler cap

(A) Place cap on here

is connected to the tank by means of a chain.

Use low-lead or regular gasoline with a Research Octane number of 91 or higher or a Pump Octane number of 86 or higher.

### NOTE:

Pump Octane is the octane formula specified by the Cost of Living Council. When refueling take care to exclude dirt, water, or other contaminants from the fuel tank.

### WARNING:

- \* Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with engine stopped. Do not smoke or allow open flames or sparks in the area where the motorcycle is refueled or where gasoline is stored.
- \* Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the filler cap is