


- (1) Tensioner lock nut
- (2) Tensioner bolt

Air Cleaner Maintenance

Air cleaner element cleaning and/or replacement intervals depend on motorcycle operating conditions. Your Honda dealer can help you to determine the frequency of cleaning or replacing the element.

A device is built under the battery box to separate oil or water from the crankcase breather tube vapors. Clean the breather

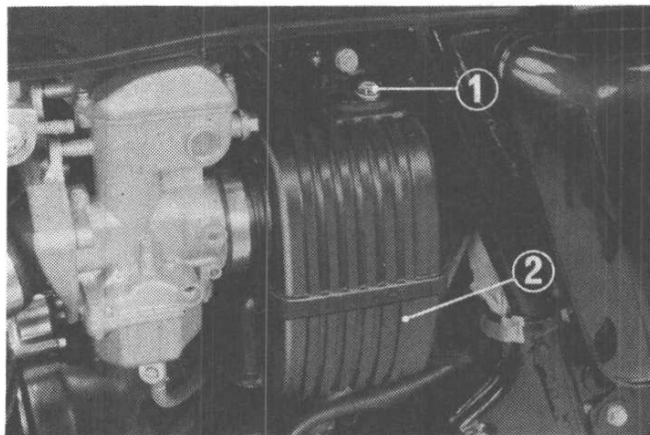

- (1) Air cleaner mounting bolt
- (2) Air cleaner lower case