



Fluid reservoirs are located at the right handlebar bracket on the front and between the right foot peg and passenger peg on the rear.

The brake fluid level in the reservoir should be checked at regular intervals. To check the front brake fluid level, clean around the reservoir cap and remove the cap, washer and diaphragm. Whenever the level is lower than the level mark (1) engraved inside the front reservoir or

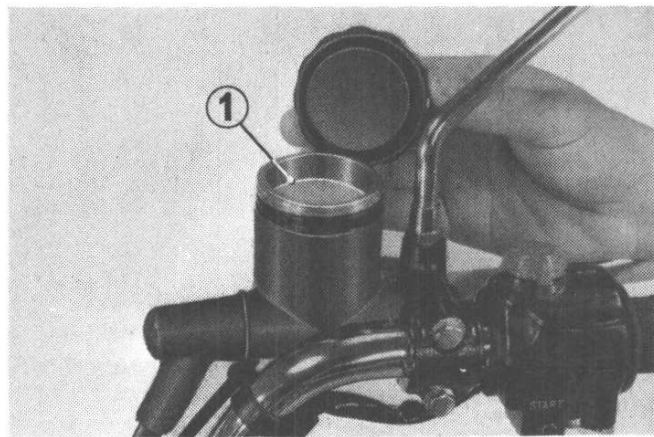

(FRONT)  
(1) Level mark

lower level mark (3) on the rear reservoir, check the brake pads for wear. Replace the pads with new ones if necessary (See page 71). After bleeding air from the system (if necessary), again check to determine that the fluid level is at the level mark (1) or upper level mark (2). If the level is low, fill the reservoir with DOT3 BRAKE FLUID from a sealed container, to the proper level. Reinstall

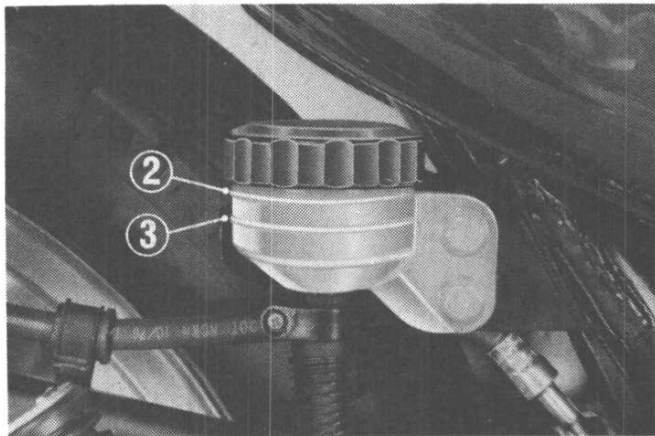

(REAR)  
(2) Upper level mark (3) Lower level mark