

the diaphragm and washer and tighten the reservoir cap securely.

If the brake pad wear does not exceed the limits, this will usually indicate fluid leak which should be repaired by a qualified Honda service technician. Consult nearest Honda dealer.


CAUTION:

- * Before removing the reservoir cap always clean around it.
- * When replenishing the front brake fluid, keep the reservoir horizontally against the ground by keeping the handlebar straight ahead position. Do not remove the reservoir cap with the handlebar turned to the right as the brake fluid may spill out.

Bleeding the brake system

The brakes must be bled with great care subsequent to work performed on the brake system, when the lever (or pedal) becomes soft or spongy, or when lever (or pedal) travel is excessive. The procedure is best performed by two mechanics.

- a. Remove the dust cap from the bleeder valve and attach bleeder hose (1).

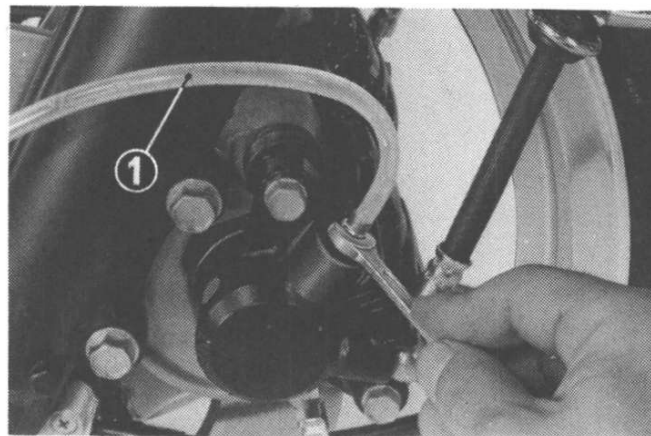

(1) Bleeder hose (FRONT)