

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the speedometer cable set screw (1) and disconnect the speedometer cable (2).
3. Remove the caliper assemblies (5) from the fork legs by loosening the fixing bolts (6) (two on each side).

### WARNING:


Support caliper assemblies so that they don't hang on the hoses. Do not twist the brake hoses.

4. Remove the front axle holder nuts (3) (two on each side), and remove the front axle holders (4) (one on each side). Remove the front wheel.

### NOTE:

Do not depress the brake lever when the wheel is off the motorcycle because the caliper piston will be forced out of the cylinder with subsequent loss of brake

fluid. If this does occur servicing of the brake system will be necessary.

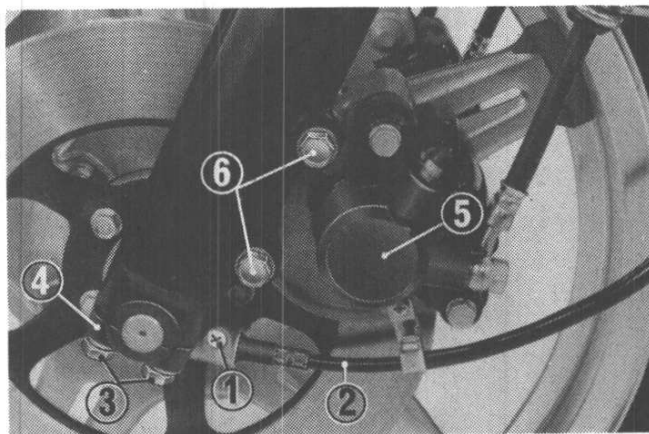

- (1) Speedometer cable set screw
- (2) Speedometer cable
- (3) Axle holder nuts
- (4) Axle holder
- (5) Caliper assembly
- (6) Caliper fixing bolts