


Tail/Stoplight Bulb Replacement

1. Remove the two screws retaining the tail/stop light lens.
2. Press the bulb (1) inward and twist to the left, and the bulb can be removed.
3. Replace with a new bulb.
4. When installing the taillight lens, do not overtighten the screw, as this may damage the lens.

Turn Signal Light Bulb Replacement

The bulb replacement is made in the same manner as for the tail/stop light bulb.

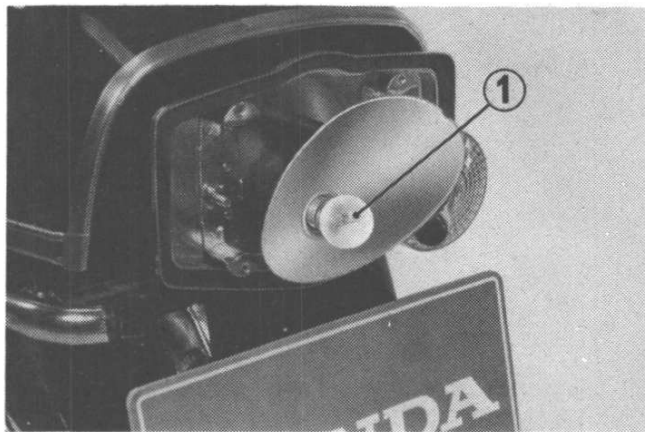

(1) Tail/stop light bulb